



# LIH-HOL1/2CONCEAL INSTALLATION INSTRUCTIONS

Patent Pending

This kit is for use with 1/2" square hollow iron balusters. Before starting the installation, balusters should already be trimmed to length from the bottom and the cut edge deburred.


1. Drill a 9/64" hole into the tread/kneewall plate 1-1/2" deep at the baluster centerpoint.
2. Install the kit assembly dowel screw into the hole using a 8mm wrench on the nut until the bushing contacts the tread/kneewall plate.
3. Slide the bottom of the 1/2" square hollow iron baluster over the installed fastener until the baluster bottom is flush to the tread/kneewall plate. **CAUTION: Make sure baluster is at the desired alignment before installing it onto the fastener. Once the baluster is in place on the fastener, it cannot be removed or repositioned.**

Tools Needed: Power Drill, 9/64" Twist Bit, 8mm Wrench

**WARNING: Wear safety goggles. Keep out of children's reach. Read and follow the safety requirements in the owners manual of any power tool used with the Newel Mounting Kit. Failure to heed all warnings could result in serious bodily injury or death.**

**NOTE: The manufacturer bears no responsibility for the quality or safety of the final installation of the stairway and/or its components.**

## TREAD INSTALLATION

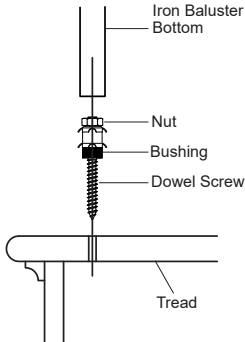

## KNEEWALL INSTALLATION

